Baby Safety Car Seat instructions Group 1+2+3 Suitable for 9-36kgs



NOTICE

- 1. This is a Universal child restraint; it is approved to Regulation No.44,04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- 2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
- 3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- 4. If in doubt, consult either the child restraint manufacturer or the retailer
- 5. These instructions are important. Please read carefully and retain for future reference.

Only suitable if the approved vehicles are fitted with 3-point safety -belts, approved to UN/ECE Regulation No.16 or other equivalent standards

Extreme Hazard Do not use in passenger seats equipped with airbags (SRS)

DIRECTORY

9.Contact us

1. WARNING	1-2
2.Getting to know your child seat	3
3.Grouping Instructions	4
4.Usage methods	1-5
5.Installation methods	5-6
6.The adjustment of harness straps and headrest	7
7.Care and Maintenance	. 8
8.After-Sale Service	8




- 1. This car set is suitable for children of 9-36kg(1+2+3group).
- 2. This child seat can only be installed forward facing using a three-point lap and diagonal seat belt.
- 3.Do not use this child seat in passenger seats equipped with airbags.
- 4.Do not use this child seat in the home. It has not been designed for home use and should only be used in your car.
- 5. This safest seating position for this child car seat is on the rear seat of a vehicle.
- 6. Never use the child seat without fastening it into the car.
- 7. It is dangerous to make any alteration or additions to the device without the approvalof the competent authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.
- 8.Do not leave your child unattended in the seat at any time.
- 9. The seat should be kept away from sunlight if the seat is not provided with a textile, otherwise it may be too hot for the child's skin.
- 10.In the event of an emergency it is important that the child can be released quickly. This means that the buckle is not fully tamper proof and so your child must be taught never to play with the buckle.
- 11. Any luggage or other objects liable to cause injuries in the event of a collision shallbe properly secured.




- 12. Periodically inspect the harness for wear, paying particular attention to attachmentpoints. stitching and adjusting devices.
- 13. The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a Movable seat or in a door of the vehicle.
- 14. Always make sure that any straps holding the seat restraint to the vehicle shall betight, any straps restraining the child should be adjusted to the child's body, and checkthat the straps shall not be twisted.
- 15.Ensuring that any lap straps is worn low down, so that the pelvis is firmly engaged, shall be stressed.
- 16.The seat device should be changed when it has been subject to violent stresses in an accident.
- 17.Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint.
- 18. Store this child seat in a safe place when it is not being used. Avoid placing heavy objects on top of it. Do not allow your child seat to come into contact with corrosive substances e.g. battary acid.
- 19. The child restraint must not be used without the cover. The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.

Name of parts

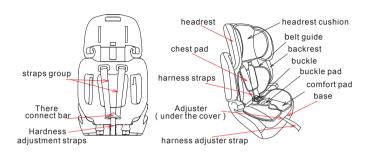

The type of Approved Seat Belt You must have



WARNING: THE CAR SEAT SHOULD NOT BE FITTED IN A PASSENGER SEAT OF A CAR THAT HAS AN AIR BAG FITTED.(SRS)

YOUR CHILD SEAT CAN ONLY BE INSTALLED FORWARD FACING USING A THREE-POINT LAP AND DIAGONAL SEAT BELT IN THE FRONT OR REAR PASSENGER SEATS OF THE CAR.







No-too low

No-too high

Yes-correct

Always check that the shoulder straps are at the correct height for your child. The child's shoulders should always be below the slot for the harness

Grouping Instructions/Usage methods

The car seat is suitable for children of 9-36kg, 9 months to 12 years old. It has three using status as below according to child's weight.


1) Group I (9-18kg). The child safety seat with backrest. Using the 3-point adult seat belt of your vehicle to fasten the seat, then fasten your child with the harness belt. (Pic.1)







Pic 2



Pic 3

- 2)Group II+III (15-36kg). The child safety seat with backrest. Remove the harness belt, then fasten the child and the safety seat with the 3-point adult seat belt of your vehicle. (Pic.2)
- 3)Group III (22-36kg). Can remove the backrest from the child safety seat, use the booster cushion only. Using the 3-point adult seat belt to fasten the child and the seat. (Pic. 3)

The usage methods of the car seat are as follows:

1. To adjust the height of the harness straps to fit your child: Slide the two harness straps off the harness connector, then pull it through any of the two strap holes up or down on the seat's backrest. Re-thread the harness strap back onto the harness connector at the back of the seat. (Pic. 4)





The harness is slackened by pressing the adjuster (under the adjuster cover) on the front of the seat. Press down the adjuster as you grip the two shoulder straps with your another hand. Pull the shoulder straps towards you to loosen the harness. (Pic. 5)





Pic. 5


Usage methods/Istallation methods

To lock the crotch strap and shoulder straps: Put the two buckle tongues together and engage in the harness buckle with an audible CLICK. (Pic. 6)



Pic. 6

Spin the backrest 180° to separate the seat base and the backrest. The seat base can be installed independently in the car. (See Pic.7)



Pic. 7

1. For Group I (9-18kg) 7 Pull out the car seat belt, thread the car lap belt under the armrest then go through the seat belt route slot in one side together with diagnol belt, then through the plastic backrest and pull out from the other side of the seat belt route slot and fasten them into the seat belt buckle. Tighten the lap belt and diagonal belt. (Pic.8). Caution! The car seat belt shouldn't be tangled, twisted or jammed in the car door or other auto-parts.

Warning: Do not pull seat belt through the headrest hook.







Pic.8

For Group II (15-25 kg): Place the child car seat on the passenger seat ensuring it is firmly against the vehicle seat,sit your child on the child seat with their back against the backrest,pull out the car seat belt ,thread the car lap under the armrest then across your child's hips,pull the diagonal belt through the hook of the child seat and then through your child's chest.then pull the lap belt and the diagonal belt through the other side of the armrest together,tighten the lap belt and diagonal belt.(Pic.9).

Caution! The car seat belt is not tangled, twisted or jammed in the car door or other auto-parts.







Pic.9

For Group III (22-36 kg): Remove the backrest from the child car seat and use the booster cushion only pull the booster seat against the passenger seat filmly pull out the car seat belt.

Thread the car lap under the armrest then across your child's hips, pull the diagonal belt through the hook of the car seat and then through your child's chest, then pull the lap belt and the diagonal belt through the other side of the armrest together, tighten the lap belt and diagonal belt. (Pic.10).

Caution! The car seat belt is not tangled, twisted or jammed in the car door or other auto-parts.







Pic.10

To release child, just press the red button on the buckle, the buckle tongues will pop up.

Tightening the harness



Pull the shoulder straps upwards to remove the slack from the lap sections of the harness then pull the adjuster strap until the harness is fully tightened.

The harness should be adjusted as tightly as possible without causing discomfort to your child.

A loose harness can be dangerous.


Check the harness adjuster and tighten each time the child is placed in the seat.



Slackening the harness

The harness is slackened by pressing the adjuster (under the adjuster cover) on the front of the seat. Press down the adjuster as you grip the two shoulder straps with your another hand. Pull the shoulder straps towards you to loosen the harness.

How to adjust the headrest

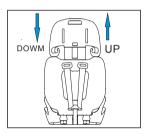

Pic 11

Removing and store the harness

1) Removing the harness buckle

Open the harness buckle (press the red release button).

Reclining the child seat backwards

Push T bar, with which the harness buckle is fixed to the seat shell, on its side upwards through the belt slot. Take out the buckle and save it.

2) Store harness straps out of occupant area

Loosen the harness straps. Pull buckle tongues out through the vehicle belt slots in the backrest. Secure the buckle tongues with webbing ties located in both sides of back cover. Install or release the back rest

Release

Push it backwards out to the base

Inetall

Make the two connector into the two base holes, then make it stand upright.



Pic.12

Care and Maintenance

These instructions are important. Please read carefully and retain for future reference.

1. remove the buckle and the harness, then remove the covers.

Important: The cover is a safety feature. Never use the child seat without it. Don't put your child's safety at risk by using other makes of replacement cover, could stop the childseat form protecting your child as well as it should.

2. Washing instruction:

The cover is removable and washable at 30°C, line dry only.











Maching wash, cold Do not bleach Dry clean Do not tumble dry Do not iron

Any solvent except trichloroethylene

The car seat should be kept in a safe place when not be used for a long time.

After-sale service

From the date of purchase within 12 months, if the product fails preventing normal use, we will provide warranty. Warranty following exceptions are free:

- 1.the user is not used in accordance with the instruction manual;
- 2.users make alterations or demolition;
- 3. after the serious accident safety seat:
- 4.due to unexpected disasters cause damage (such as fire , floods , earthquakes , etc.)

Please keep quality assurance . When in need of repair , please bring the warranty card and purchase invoices, contact your local dealer.